



FLOOR PLAN 6000 S.F. 1/8"=1'-0"
 TYPE IV CONST. / UNSPRINKLERED / UNPROTECTED (12,000 S.F. MAX.)

SEEDING SCHEDULE:


Fertilizer	10-10-10 @ 1000 lb/ac	
Lime	@ 4000 lb/ac	
Mulch	- small grain straw @ 1 1/2 to 2 tons/ac	
PERMANENT SEEDING:		
August 15 to February 15	- Sericea Lespedeza (unhulled, unvacarified)	1b/ac
	Tall Fescue	2.5 lb/ac
	Annual ryegrass	25 lb/ac
February 15 to April 15	- Sericea Lespedeza (hulled)	60 lb/ac
	Tall Fescue	150 lb/ac
	Annual ryegrass	25 lb/ac
April 15 to June 15	- Bermuda grass (hulled)	40 lb/ac
	Weeping love grass	20 lb/ac
TEMPORARY SEEDING:		
June 15 - August 15	- Brown top millet (seed drill-no mulch) (seed permanent grass next appropriate planting season)	40 lb/ac

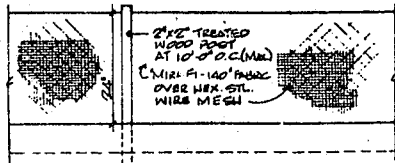

ELEVATION

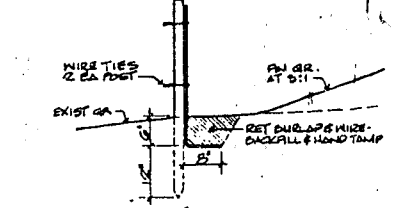


SECTION BURLAP FENCE

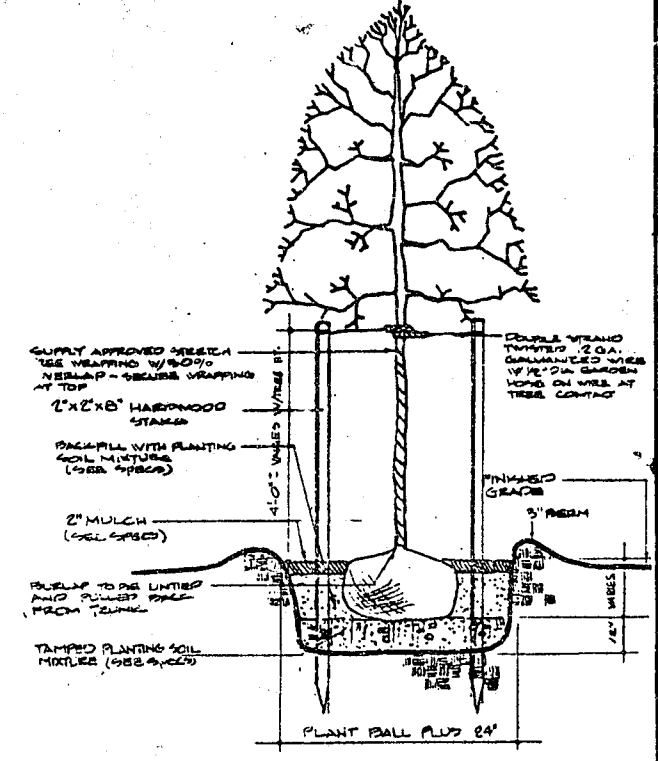

DETAIL SMALL TREE PLANTING & GUYING
 NOT TO SCALE

PRUNE AT THE TIME OF PLANTING
 PRUNE AT LEAST 1/3 OF FROM CENTER OF PLANT OUTWARD, MAINTAINING CHARACTERISTIC SHAPE
 PLANT SLIGHTLY HIGHER THAN NATURAL GROWTH LEVEL

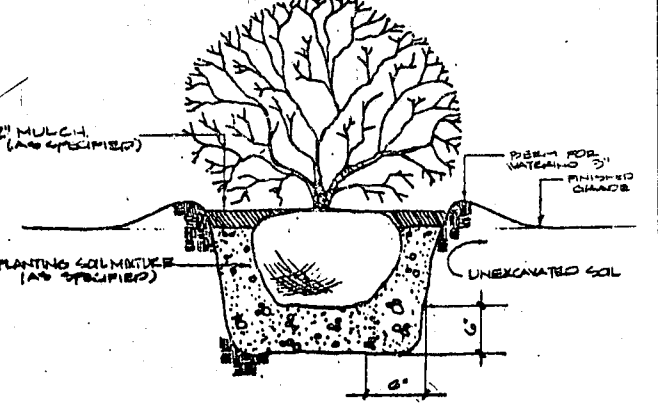

SMALL SHRUB PLANTING